


# SHAD

## QJMOTOR SRV 550 '22

### TOP MASTER Q0SV52ST

BCN

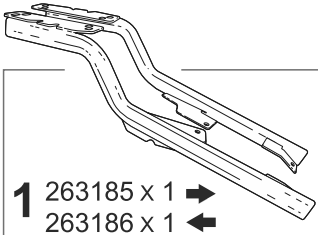

**1** 263185 x 1  
263186 x 1



**2** 260686 x 2  
Ø16 Ø9 x 8




**3** 303045 x 6  
Ø8



**4** 304272 x 2  
M8x35 DIN 7380



**5** 260523 x 2  
Ø16 Ø9 x 25



**6** 304069 x 2  
M8x55 DIN 7380



**7** 303027 x 4  
Ø8

### WARNING!

**GB** Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

**E** No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

**D** Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

**I** Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

**F** Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

