


SHAD

BMW F800 R '09-'15


W0FR89iF

3P
SYSTEM

BCN

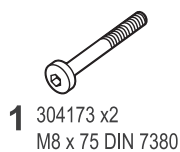

1 304173 x2
M8 x 75 DIN 7380

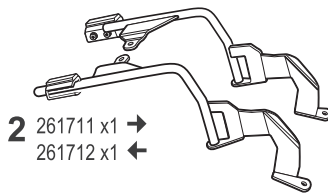

2 261711 x1 →
261712 x1 ←



3 303020 x4
Ø8



4 304169 x4
M8 x 50 DIN 7380



5 260648 x2
Ø16 Ø9 x 5



6 303045 x6
Ø8



7 302024 x4
M8



8 260225 x2
Ø12 x 15

WARNING!

(GB) Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E) No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D) Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I) Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F) Ne pas serrer les vis avant d'être sûr que le KIT soit correctement positionné et ajusté.

